



User Guide

Contents

Helpline button _____	3	Calculator _____	9
Insert SIM card and battery _____	3	Recorder _____	9
Insert memory card _____	3	Calendar _____	9
Battery charging _____	3	Alarm _____	9
Power on and off _____	3	Troubleshooting for Basic Issues _____	10
Making an overseas call _____	3	Mobile phone can't be turned on _____	10
Dialling via Contacts _____	3	Mobile phone turns off automatically _____	10
Calling an extension number _____	4	PIN/PUK code lock _____	10
Calling an emergency phone number _____	4	Poor quality of conversation _____	10
Answer or reject incoming calls _____	4	Inability to answer mobile phone _____	10
Menu during a call _____	4	Inability to dial mobile phone _____	11
Adjust volume _____	4	Low conversation volume _____	11
End a call _____	4	Other party can't hear you _____	11
Browsing contacts _____	4	No ringtone for incoming call _____	11
Quick search _____	4	Battery can't be charged _____	11
New contact _____	4	No network displayed _____	11
Function Menu of Contacts _____	4	Memory card can't be found in mobile phone _____	12
Missed calls _____	5	Insufficient space _____	12
Dialled calls _____	5	Health and safety information _____	12
Received calls _____	5		
Rejected calls _____	5		
Delete all _____	5		
Call timers _____	5		
Phone Settings _____	5		
Display _____	5		
Security settings _____	5		
Call settings _____	6		
Call Barring _____	6		
Connections _____	7		
Write message _____	7		
SMS _____	7		
Inbox _____	7		
Outbox _____	7		
Drafts _____	7		
Sent box _____	7		
Templates _____	7		
AudioPlayer _____	7		
Video _____	8		
E-book _____	8		
My Files _____	8		
Image _____	9		

Helpline Button

Your device includes a dedicated help line button. In order to access the helpline please press the dedicated button down for 2 seconds. This will prompt the action to Call the 24/7 Helpline, pressing ok will automatically place the call. This action can be performed at any position in the phone menu.

INTRODUCTION

Insert SIM card and battery

1. Press and hold the power button for 3 seconds to turn your device off.
2. Slide the back cover downwards and remove the back.
3. Remove the battery. Insert SIM1: Carefully push the SIM card inwards from the card slot until it fits into the slot. Insert SIM2 in the same way.
4. Insert the battery with metallic contacts aligned to the phone battery contacts and replace the back cover.

Note: this user guide is designed for both SIM cards inserted by selecting [Settings→Call Settings→Dual-SIM→Standby mode→Dual SIM dual standby]. If only one card is inserted or no Dual SIM dual standby is set up, the screen and options may differ from this manual.

Insert memory card

This phone supports the T-Flash memory card. After it is inserted, you can browse or copy, etc. the files stored in the memory card. Remove the back cover and battery and insert the memory card in the direction shown;

Warning: please do not insert or remove the memory card quickly or frequently to avoid damage.

Battery charging

The phone battery may be charged with the travel charger.

Insert the battery in the phone correctly;

After the charger is inserted, the battery icon on the upper right of the screen will start to fill, which means the battery is charging. When your battery

has charged full, the icon will stop moving and the battery icon on the screen becomes full.

Note:

1. Please use the standard matched battery and charger to prevent damage.
2. If the battery has absolutely no power, the battery icon will appear 2~3min after charging. Charging may take 2~5h depending on the current condition of this device (whether it is started, any call is made, etc.).
3. Please use charger to charge this device. USB wire charging should be avoided if possible.
4. In order to help the new battery perform best, it should complete 2~3 charge-discharge cycles. Its initial charge should last for more than 10h without interruption.

Power on and off

Power on

Press and hold the power key for 3s to turn on this phone.

Power off

Press and hold the power key for 3s to turn off this phone.

Warning: please don't turn on this phone where it is prohibited or when using it may cause interference or danger.

Making an overseas call

Enter “+” (by pressing * twice consecutively) followed by the country code;

Enter the area code (without “0” prefixed to that as usual) and the phone number;

Press “Call”. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2.

Dialling via Contacts

Enter the Contacts application and search for the phone number you need;

Press the options key and select Call in the option menu.

Calling an extension number

Enter the number;
Press [Option→Insert→Pause] and then input the extension number;

Press “Call”. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2

Calling an emergency phone number

Enter the emergency phone number;

Press “Call”. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2

Answer or reject incoming calls

If there is an incoming call, press “Answer” to answer it;

If there is an incoming call, press “Reject” to reject it;

Menu during a call

During a call, you can:

Hold: Press [Hold] to hold current call, and press [Unhold] to resume the current call when holding (this function needs to be supported by the network provider).

Contacts: Enter into your contact list.

Keypad: Enter into the dial interface.

Record: Record the call details, and a recording will be kept in the file manager automatically.

Note: It is illegal to record any phone call in some countries. So please do so with the speaker's prior consent.

Mute: Turn off the microphone during the call. In the mute mode, you can hear the speaker but the speaker can't hear you.

Handsfree: Start or cancel a handsfree call.

Adjust volume

You can adjust the volume of receiver by pressing options key, select the “adjust volume”.

End a call

Press “Hang up” to end a call.

MAIN MENU

Contacts

Browsing contacts

Select [**Contacts**] and open the name list.

The contacts are listed in the order of unnamed, special symbols, digit and alphabetically.

Quick search

Select [**Contacts**] and open the name list.

Choose search bar to search contacts through the keyboard.

New contact

SIM1: The contact is added to SIM1 with only one number stored under a name.

SIM2: The contact is added to SIM2 with only one number stored under a name.

Phone: Contact is stored on the handset and the editable items include incoming call Icon, the name, phone number, home number, and/or group to which it may belong.

Function Menu of Contacts

Select [**Contacts**] and press “options” to access the following functions:

New: add new list to SIM or phone.

Delete multiple: can delete some contacts or all contacts.

Import/Export: export contacts to microSD card or import contacts from microSD card.

Others: includes speed dial, own number, service number and memory status.

On the contacts list interface, choose one record and press options to access the following functions:

New: add new list to SIM or phone.

Write message: send a message to the contact.

Call: ring the contact.

Delete: Delete the contact.

Delete multiple: can delete some contacts or all contacts.

Import/Export: export contacts to MicroSD card or import contacts from MicroSD.

Send vCard: send the contact in vCard.

Others: includes speed dial, own number, service number and memory status.

Call logs

Display your recent call logs of SIM 1/SIM2 .

Missed calls

Displays the list of your recent missed calls for SIM1/SIM2.

Dialled calls

Displays the list of your recent dialled numbers from SIM 1/SIM2.

Received calls

Displays the list of your recent answered numbers of SIM1/SIM2.

Rejected calls

Display the incoming call records in the blacklist of SIM1/SIM2.

Delete all

Delete all the records of SIM1/SIM2.

Call timers

Display the last call time, received calls time, dialled calls time, and total call history of SIM1/SIM2. Press "Reset" to reset the time.

Settings

Phone Settings

The items include:

Time and Date: Can customise time and date as well as their formats

Language: Can customise the display language and writing language.

Auto Power On/Off: Set time and repeat ways of the automatically power on/off.

Power Management: Display the battery power.

Restore factory settings: Can restore part of the phone settings as factory settings. The default password for restoring factory settings is 1234.

Display

Animation effect: Set the Power on/off animation.

Wallpaper settings: Can set as default wallpaper image as well as more other wallpaper images.

Idle display settings: Can set the information you require on idle display of your mobile phone.

Contrast: On the screen backlight interface you can set different brightness of your phone by pressing the left/right direction key.

Keypad backlight time: Can choose 20 secs, 10 secs, 5 secs, night mode or off.

Auto keypad lock: Auto lock for the phone to lock its screen and keypad automatically after some idle time in Standby mode. Can hold down * key in the Idle mode to lock by manually.

Security settings

Including:

PIN code: Start and close of PIN code and the modification of PIN.

Warning: please use this function cautiously. If you forget the PUK code, please obtain it from your service provider. Ten consecutive incorrect PUK code entries will make the SIM card unusable.

Modify PIN2 code: Modification of PIN2 code.

Warning: be cautious to use this function, if wrong PUK2 code is entered 10 times, SIM card can not be used.

Phone Lock: Open or close the phone lock.

Modify the Phone Password: Change the phone password.

Privacy Protection: Set the privacy protection

Lock screen by end-key: Lock screen by pressing the end-key.

Fixed Dialling: Start and close of the fixed dialling, and management of the fixed dialling list.

Blacklist: Settings of the blacklist and management of the list.

Call settings

Including:

Dual SIM settings: including Standby mode, Reply by original SIM, Set SIM name and colour.

Call Divert:

- **Call forwarding unconditional:** After this function is activated, you can divert all incoming calls to Voicemail or the pre-determined phone numbers. Choose [Check Status] to view the current status of the Divert all voice calls service.
- **Call forwarding on busy:** After this function is activated, you can divert the incoming calls to Voicemail or the pre-determined phone numbers if you are on a call.
- **Call forwarding on no answer:** After this function is activated, if the call is not answered within the pre-determined time, you can divert the incoming calls to Voicemail or the pre-determined phone numbers.
- **Divert if unreachable:** After this function is activated, if you are unavailable because there is no coverage or the phone is powered off, you can divert the incoming calls to Voicemail or the pre-determined phone numbers.
- **Cancel all diverts:** Cancels all call diverts.

Call Waiting:

- **Activate:** After the function is activated, the network will inform you of the new incoming calls when you are on a call. You can hold on the current call and answer another call.
- **Off:** Cancel the Call waiting service, and the incoming calls will not be transmitted when you are on a call.
- **Check status:** You can check and view the current status of the Call waiting service.

Call Barring

- **All Outgoing calls:** All outgoing calls are limited
- **All Incoming calls:** All incoming calls are limited
- **Incoming calls when roaming:** All calls can not be answered when roaming
- **ISD calling:** International calls are limited
- **Dial when INTL roaming:** International calls are limited when you are abroad
- **Cancel all call barrings:** All call barrings are cancelled
- **Change password:** Barring password can be edited

Note: some service providers may limit the use of this function. For details, please contact your service provider.

When you are applying this service, your internet service provider will offer you the original network password.

Hide ID: Set the display mode of the phone number.

Others: The settings item include IP prefix, Call time minute reminder, Auto redial, Vibration when connected, Reply SMS after reject, Auto record voice call.

Connections

Network account: You can select which network account you want to use.

GPRS Service: Allows you to turn on/off the function. Set it on, you can use GPRS service.

Network Selection: When your service is roaming, the network can be selected automatically or manually. The network roaming service you receive depends on your network operator. Auto select: Press left soft key, the phone will automatically search networks. The operation will have the phone independently registered to the network with the strongest signal. Manual select: Press left soft key, the phone will search available networks, and you can select one of the compatible networks from the network list.

Message

Write message

SMS

Press **[Write message→New SMS]** to enter into the message editor interface, manually input or insert the contacts from the address list as the recipients, press “send” button to send the messages after editing the contents.

Create a new message:

Send: Send the new message.

Insert template: Insert template in the cursor position.

Add contact info: Insert in the message a name and its number from the Contacts.

Add symbol: Insert an expression or symbol in the cursor position.

Save as draft: Save the edited message in the Drafts box.

Inbox

Saves all received SMS and MMS.

Outbox

Saves the SMS and MMS not sent out successfully.

Drafts

Saves unsent messages and MMS.

Sent box

Saves the SMS and MMS you sent successfully if you had set save sent messages.

Templates

Directly use the default phrases when writing the messages.

Settings: Set relevant parameters for the short messages, multimedia messages, push messages and others.

Delete all: Delete the messages of mailbox

Message capacity: Show the memory capacity of the messages.

Export SMS: Select the mailbox and path for exporting SMS.

Profiles




The preset modes are Normal mode, Silent, Meeting mode, Indoor mode, Outdoor mode, the handset supports custom profiles (limited to 5), and users can set the parameters of the profiles.

Instruction: The preset profiles can not be deleted, while custom profiles can be deleted.

Audio Player

Audio Player can play the music stored in the Phone or Memory Card.

In the audio player interface:

- Press  can play the music;
- Press  can pause the music;
- Press  can choose the previous and next song.
- Press up/down navigation key to adjust

volume of music.

On the audio player interface, press options key, then you can do operations as follows:

- **Music list:** Display music files list.
- **Music mark:** Choose music to add in to Playlist or Delete from Playlist.
- **Update:** Update Playlist.
- **Add:** Choose new music and add it to Playlist.
- **Set as ringtone:** set the selected music as incoming call ringtone or alarm ringtone.
- **Shuffle:** You can choose the shuffle play mode.
- **Repeat:** You can choose the repeat play mode.

Settings

- **Display settings:** You can choose the Normal, Lyrics display, Lyric on and backlight on, Spectrum or Album image display settings.
- **Equaliser:** Set the different equaliser.
- **BT stereo output:** You can select Activate or Deactivate.
- **BT stereo headset:** Bluetooth may be activated to access Paired device.
- **Open/close review:** A->B repeat.
- **Exit:** Stop music and Exit to audio player.

Video

Enter the video play interface, press left soft key, you can go on the following operations:

- **Open:** You can open local browser or local Playlist.
- **Adjust brightness:** You can adjust brightness when playing video.
- **Repeat:** You can choose the repeat play mode.
- **Shuffle:** You can choose the shuffle play mode.

- **Set as:** power on display, power off display
- **Local video play mode:** You can choose audio and video synchronisation priority or screen fluency priority.
- **Details:** View the details of the video.
- **Settings reset:** Reset initial settings.
- **Help:** You can view the instructions.
- **Exit:** Stop video and Exit to video player.

E-book

E-book can support file of TXT format. You can copy TXT file to [E-book] folder on the microSD card by PC. In standby mode, enter the function menu, then select **[E-book]**.

Select a book in the bookshelf to read.

My files

File manager can manage the files in the memory card.

You can check the content in the Phone and Memory Card via this function. You can also format the phone or memory card.

Choose one folder and press options key, then you can operate as follows:

- **New folder:** Create a new folder.
- **Delete:** Delete the folder.
- **Details:** Check details of the folder.
- **Edit:** Rename, copy or cut the folder.
- **Search:** Search the file in the folder.
- **Sort:** To sort according to name, time, size and type.
- **Mark:** Mark one or all the folders in phone / Memory Card.
- **Memory status:** View the space of the phone / Memory Card. In this interface you can format the phone / Memory Card, but this operation will cause the data in it to be lost forever.

Image

You can view the pictures saved in the Phone or Memory Card as well as edit them.

In the picture list interface press options key, you can do the following operations:

- **Set as wallpaper:** Set selected picture as wallpaper.
- **Set as contact icon:** Set selected picture as contact icon.
- **Delete:** Delete the selected picture.
- **Share:** Share the picture to others via MMS/Bluetooth.
- **Edit image:** Edit selected image.
- **Mark:** Choose one or all of the pictures in the list.
- **Rename:** Rename the picture.
- **Slide Play:** Play the pictures in the list in a slide show manner.
- **Details:** View the details of the picture.

Calculator

1. Select **Calculator** under functions menu mode.
2. Use the buttons matched with the calculator to carry out basic arithmetic operation.

Recorder

Enter into the functions menu to select the **Recorder**.

1. Press **Record** button on the interface to record.
2. Press **Pause** button to pause the recording.
3. Press **Stop** button to stop the recording.
4. After stopping the recording, the recording documents will be automatically saved in the "Audio" file in the memory card, click **Folder** to check.

Calendar

You can look up the calendar according to this function. Press left soft key on the Calendar interface, you can do the following.

- **Add new schedule:** You can set up a calendar reminder.
- **View schedules:** You can check a calendar reminder of a certain date.
- **All schedules:** You can check all calendar reminders.
- **Clear today's tasks:** You can clear the calendar reminder of a certain date.
- **Clear all:** You can clear all reminders.
- **Go to date:** You can check a certain date.
- **Weekly/Monthly:** Display weekly/monthly calendar reminder.
- **Daily:** Display daily calendar reminder.

Alarm

Enter into the function list, then select **Alarm**.

Press OK key to enter "alarm edit" mode, then you can select desired settings. You can edit message, time, ringtone and repeat mode.

Troubleshooting for Basic Issues

In the course of using the mobile phone, if problems occur, please refer to the following instructions to rule out malfunctions. If this does not work, please contact the original retailer.

Mobile phone can't be turned on

Possible Issue	Troubleshooting
The time pressing end key is too short	Please keep pressing end key for more than three seconds
Electricity of battery is exhausted	Please charge the battery
Battery is misinstalled	Please install battery correctly
Mobile phone can't be turned on because of illegal usage	Please input correct anti-robbery password

Mobile phone turns off automatically

Possible Issue	Troubleshooting
If the function of turning off mobile phone at set time is on	If you don't need the function of turning off mobile phone at set time, please cancel it
The electricity of battery isn't sufficient	Please charge the battery
The battery is loose	Please install battery correctly according to installation method of battery on the instruction book
Mobile phone is turned off automatically because of illegal usage	Please input correct anti-robbery password

PIN/PUK code lock

Possible Issue	Troubleshooting
Wrong PIN number (Personal Identification Number) / PUK number (Personal Unlock Key number) is entered	Please input correct password

Note:

1. If PIN number is input wrong 3 times consecutively, many functions of SIM card and mobile phone are locked.
2. Correct PIN number and PUK number can't be guaranteed, please contact operator or retailer.

Poor quality of conversation

Possible Issue	Troubleshooting
Current signal strength changes sharply	Maybe you are in a status of moving at high speed (in a train or motor vehicle, etc.), judge by signal strength indicator and choose a place with strong signal strength to communicate in order to assure conversation quality
You are in the location where signal is poorly received	Please go to an open place

Inability to answer mobile phone

Possible Issue	Troubleshooting
Call forwarding is set	Please cancel call forwarding according to your demand
Call barred is set	Please cancel relevant barred function of Call barred according to your demand

Inability to dial mobile phone

Possible Issue	Troubleshooting
Mobile phone is powered off	Please turn on your mobile phone
Mobile phone is out of network service area	Please confirm network is in normal service status
Proper SIM card isn't correctly inserted	Please confirm if your SIM card is active
Call barring is set	Please cancel relevant barred function of Call barring according to your demand
Keyboard is locked automatically	Please select left soft key + # key, unlock keyboard

Low conversation volume

Possible Issue	Troubleshooting
The conversation volume is set too low	Please increase conversation volume

Other party can't hear you

Possible Issue	Troubleshooting
Your microphone is too far away from voice	Put the microphone close to your mouth

No ringtone for incoming call

Possible Issue	Troubleshooting
The alerting volume of incoming calls is set in mute mode	Please reset alerting volume of incoming calls in ringtone options
The volume of ringtone is set too low	Please increase volume
Call forwarding is set	Please cancel Call divert

Battery can't be charged

Possible Issue	Troubleshooting
The battery is exhausted and placed for too long	Please charge battery in time after mobile phone notifies of insufficient power
Battery is in bad contact with mobile phone	Please make sure battery is correctly placed
Charger is in bad contact with mobile phone	Please correctly connect charger and port of mobile phone, now the screen displays charging indicator
Battery or charger is damaged	Please contact phone retailer for support options
The surrounding temperature is too low or too high	Please charge mobile phone under normal temperature

No network displayed

Possible Issue	Troubleshooting
SIM card is wrongly placed	Please place SIM card correctly according to its installation method on the instruction book
There are impurities between SIM card and contacts of mobile phone	Please keep clean between SIM card and the contacts of mobile phone
SIM card is ineffective	Please check if SIM card is expired
Network environment is in weak field strength area	Please move to the place with good signal strength of network for using mobile phone

Memory card can't be found in mobile phone

Possible Issue	Troubleshooting
Memory card is wrongly inserted	Please use memory card correctly according to its inserting method on instruction book
Memory card is damaged	Please change memory card

Insufficient space

Possible Issue	Troubleshooting
MMS or SMS have occupied too much storing space	Please clear unnecessary MMS or SMS to free up space
History recording saved in browser has occupied too much storing space	Please select Communication → Browser → WAP settings → Browser settings → Clear cache to free up space

Health and safety information

Safety and Maintenance

1. Before use, please read this instruction manual carefully

- Do not switch on the device when use of a mobile phone is prohibited or when it may cause interference or danger.
- Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
- Please keep your device turned off when you are on a plane. If functions that will automatically power on your device, such as alarm clock or calendar are setup, please check and cancel the configuration before boarding the plane.
- While using the device, please keep it away from heat sources and high voltage appliances. Please use the device under normal temperatures Using it at temperatures above 55°C or below -10°C may damage the phone. Your device is not water-resistant. Keep it dry.
- Standard battery, charger and accessories provided with your device should be used. The device user is responsible for any consequence caused by the use of third party accessories.
- Tablets may cause interference to nearby electronic devices, such as TVs, radios, pacemakers, hearing aids etc. Do not place the device near a credit card or magnetic field. Switch off

your device when regulations posted instruct you to do so, for example, in hospitals.

- Do not drop, knock, or shake the device.
- Rough handling can break internal circuit boards and mechanics.
- Do not disassemble the device.
- Do not use benzene, thinner or alcohol to clean the cover of your device.

Keep your device away from corrosive chemicals such as detergent.

Use a clean and soft cloth instead and wipe gently.

- Keep the device and battery dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

2. While using the battery, please observe the following points:

- Please charge the battery in a cool and well-ventilated room. High temperatures may lead to overheating, smoking, burning, distortion or even explosion of the battery.
- Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water and seek medical help.
- Do not short connect the battery, as this may cause damage to the battery and components connected to it. A short circuit may be caused by a coin or clip directly contacting the anode and cathode of the battery, so do not put the battery together with metal objects.
- Do not short-circuit. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- Please keep the metal contact points and battery clean.
- Never use any charger or battery that is damaged.
- The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Only replace with an approved battery.
- Prevent the battery from exposure to the sun or places with excessive smoke or dust.
- Avoid extreme temperatures. Extreme temperatures (above 55°C or below -10°C may reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.
- Do not expose the battery to fire as it may explode.
- Do not expose the battery to water as this may damage it and cause the battery to explode.

- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.
- A special charger should be used for this battery. You should not charge the battery for longer than 12 hours at a time.
- Keep the battery out of reach of children.

3. While using the battery charger, please observe the following points:

- Do not disassemble or modify the charger or use it when the power cable is damaged as there could be a risk of electric shock or fire.
- Do not touch the charger with wet hands. If the charger contacts water or other liquid, immediately cut off the power supply.
- Do not short circuit the charger. Keep it away from mechanical vibrations or shaking. Do not expose the charger to direct sunlight. Do not use it in a damp environment, such as a bathroom. The battery charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as a TV set or radio.
- Keep the charger out of reach of children.

4. Handle SIM cards and memory cards with care:

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-colored contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

5. FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Properly shielded and grounded cables and connectors must be used to meet FCC emission limits. Ekit is not responsible for any radio or television interference caused by using other than recommended cables or connectors.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

These devices comply with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) These devices may

not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesired operation.

6. Specific Absorption Rate (SAR) certification information

Your device conforms to international standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.276 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

7. Correct disposal of this product

(Waste Electrical & Electronic Equipment) This marking on the product, accessories or literature indicates that the product and its electronic accessories, such as batteries, chargers, headsets, or USB cables should not be disposed of with other household wastes at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

8. Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal, non-commercial use.

You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed on this device.